



4G 42% 14:44



4G 40% 14:58

X



Choose a WiFi network


HUAWEI-J8ZLDJ

.....

Next

Select the Wi-Fi in your home
and type in the password for
this Wi-Fi

Select the Central heating
Water Heater

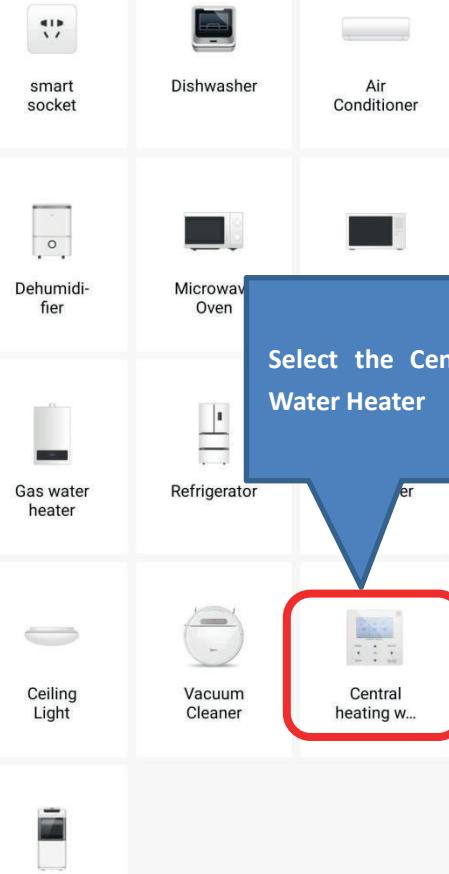

4G 42% 14:45

<

Select model



KJRH-120F/

The App will automatically
find out the controller, here
the controller is KJRH-120F



4G 42% 14:45

<

Add device



1. Click the "MENU" button on the wired controller, select "WLAN SETTING" and click the "OK" button.
2. Select "AP mode" and click the button.
3. Click the right direction button on the wired controller, then click the "OK" button to enter the AP mode. The "WiFi" icon

Check the Operation
Completed and click on
"Next"

Operation completed

Next